

Ignition/Alternator Kit - BSA B25, B40, B44, B50, C15, Royal Enfield Bullet STK-100D - CDI ignition +12v AC lighting + 12v DC battery charging




CONTENTS

Stator BP100 Rotor R0100 Digital CDI RR215
Fitting kit HT55 + 5K ohm HT Cap
1 Male & 1 Female bullet + cover 2 Ring Tags M6

PRODUCT FEATURES

- Replacement for Lucas or Wipac alternator. Complete digital self generating ignition and alternator, pre-programmed advance curve gives optimum performance.
- No battery, contact breaker assembly or distributor required for the ignition.
- New simple timing set-up align marks on the rotor and stator at TDC. Rotor is supplied with a taper locking collet, enabling the rotor to be fitted on the 3/4" crankshaft without the need for a woodruff key, this allows system to be fitted even if keyway is damaged, or the shaft worn or undersize. The rotor can be fixed in any position making timing easier to set up.
- Single phase alternator 50w output with combined regulator and regulator/rectifier. This gives a controlled 12v AC output to the lighting circuit to prevent bulb failure + 12v DC output to a battery - if fitted, not required for ignition or lighting. The battery can be replaced with a capacitor pack if required, this gives greater reliability but has limited energy storage capability.
- **NOTE: A battery is NOT required to run the ignition or lighting but advantageous for brake, light operation or indicators.**
- Rotor is supplied with a taper locking collet, enabling the rotor to be fitted on the 3/4" crankshaft without the need for a woodruff key, this allows system to be fitted even if keyway is damaged. The rotor can be fixed in any position making timing easier to set up.

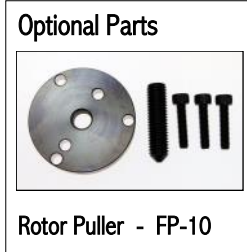

How it works

The cdi (capacitive discharge ignition) works by charging a capacitor within the cdi unit from the source coil on the stator, this same coil also produces the timing signal. The cdi digitises the signal and uses the microprocessor to derive the pre-programmed ignition timing curve. Electronic advance at 5000 rpm is 31°.

NOTE: for the B44/B50 and ex. WD B40, models. Modification may be required if the alternator/clutch cover has an inspection plate retained by 3 small screws. The rotor may touch one of the x3 blind threaded bosses, requiring 2-3mm of metal to be removed to give sufficient clearance. See website for more information.

Fitting Instructions

- Step 1** Remove the petrol tank and seat. Remove original HT coil, rectifier & zener diode if fitted.
- Step 2** Remove LH engine cover, exposing alternator. Undo the x3 nuts holding the alternator/stator. Retain the nuts. Remove old alternator/stator from the crank cases.
- Step 3** Undo the rotor nut, this can be done by holding the rotor with a suitable tool. If an impact wrench is available it is not normally necessary to hold the rotor.
- Step 4** Fit new stator in position shown (fig. 2), use the 3 spacers supplied, on the threaded studs and use the original retaining nuts. Don't fully tighten yet. Feed the stator cables through the crankcase using the original grommets as required. **Note:** The cables are not pre-terminated with connectors to make the cable feeding easier.
- Step 5** Remove the woodruff key from the crankshaft. Locate the taper locking collet on the crankshaft as far as possible and then fit the new rotor. Ensure the rotor is not touching the stator when turned by hand. If so it may be necessary to fit a spacer/washer on the crankshaft before the taper collet is fitted. Fit the original stepped nut and tighten a little so the rotor can still be moved relative to the crankshaft. We recommend using loctite on the thread to retain the nut.
- Step 6** **Setting the timing :**



The new rotor R0100-03. has degree markings to make timing set-up simple. With the piston set at TDC (Top Dead Centre) align the correct degree marking, i.e. '34°' for a B50, with the red dot on the stator plate. This sets the full advance to 34°. This can be checked by using a strobe light - where the 'FA' mark on the rotor should align with the red dot on the stator.

Tighten the rotor retaining nut to about 40Ft/lbs torque. Final adjustment can be made by moving the stator on the slotted holes - tighten the x3 nuts when set.

	Model	C15/B40	B25	B44/B50
Full advance	degrees	35.5°	37°	34°

Note: For singles with twin plug heads the timing can be set a few degrees retarded as the explosion in the cylinder occurs more rapidly.

- Step 7** **CDI connections see Fig.4.-** Fit the 3 yellow cable seals onto the blue, white & black cables followed by the terminals. It is recommended these are crimped and soldered. Insert the terminals in to the connector block, see numbers on the connector block, and circuit diagram. Black cable in to position 1, the White cable in to position 2 and the Blue in to position 3. If removal is required - see notes below.
- Step 8** Remove the original HT coils, the mechanical advance unit and points; these are not required for this system. If a distributor is fitted is also not required but may wish to be retained for originality.
- Step 9** Locate the HT coil in a convenient position, note the HT coil is supplied with an adaptor plate, also the HT cables can be cut to length as required. Only use the HT coil provided as this is suitable for cdi ignition, also the plug caps should be used as these are 5k ohms resistor type and will protect the digital cdi from damage.
- Step 10** Locate the CDI unit in a position to allow the orange and black wires to connect to the HT coil. The orange lead with a female 1/4 terminal is connected to the male terminal on the HT coil, the black cable with the M6 ring terminal connects to the mounting bolt for the HT coil (earth). The remaining black/white wire from the CDI is for connection to a stop switch - when grounded it will cut the ignition; see circuit diagram., on next page.
- Step 11** See Fig.5. Insert cables for regulator connector as shown. **Important:** All additional earth cable connections need to be linked together with a cable. See Product Features for more info regarding alternator and reg/rec.



Terminal removal

The terminals are retained in the connector block by a small tab. If they have been put in the wrong position they can be repositioned by using a small screwdriver or similar to depress the tab at the same time pulling gently on the cable.

NOTE: For the seal connector block it is first necessary to remove the red plastic cover.

Troubleshooting - No Spark

- Disconnect black/white from kill switch in case it is faulty
- Check resistance of source coil on stator, this should read 290 ohms between the blue and white cables.
- The cdi ignition produces very high voltage but for a short duration, so the spark is not easily visible.
- When inserting the terminals in the connector - see Fig 4 - you should hear a click, gently pull each cable to make sure they are attached. **NOTE: They only fit one way.**

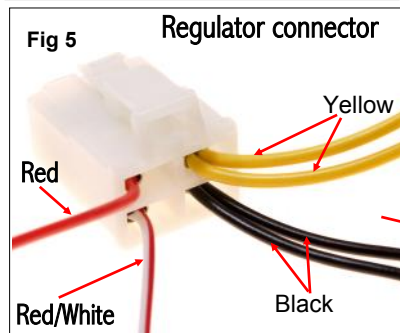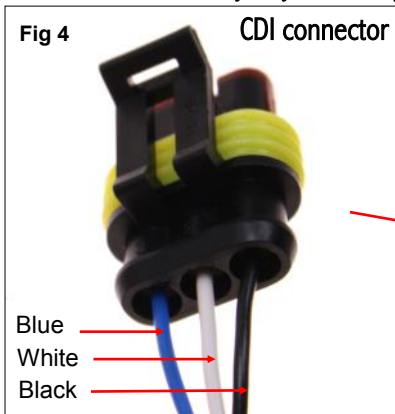

Insert connectors into plug as shown above

